



1. PRE-CLEANING

Tap the element to dislodge any loose dirt, then gently brush with a soft bristle brush.

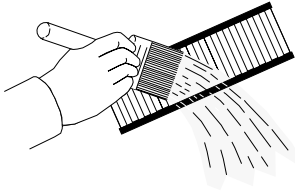


2a. SPRAY ON CLEANER

Spray K&N Air Filter Cleaner liberally onto the filter media and let soak for 10 minutes.

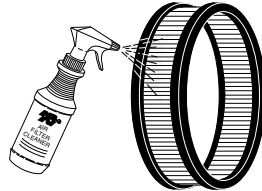


2b. PAN CLEANING

Large K&N filters can be rolled or soaked in a shallow pan of K&N air filter cleaner. Then, remove immediately and let soak for approximately 10 minutes.

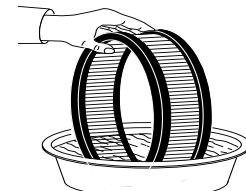

3. RINSE OFF

Rinse off the cotton filter media with low-pressure tap water. Rinsing from the clean side to the dirty side.

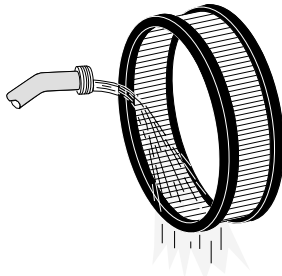

4. DRYING KITS

After rinsing, shake off all excess water, and dry naturally. **The use of other cleaning or drying methods will damage the filter and void the K&N air filter warranty.**


OILING

You can choose to oil with:

- 5A. AEROSOL SPRAY
- OR
- 5B. SQUEEZE BOTTLE


5a. AEROSOL OILING

After filter is completely dry, spray oil along each pleat, once only, holding nozzle 3" away from filter media.

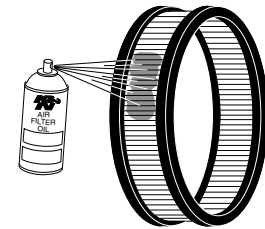

5b. SQUEEZE BOTTLE OILING

After filter is **completely** dry, squeeze oil along each pleat, once only.

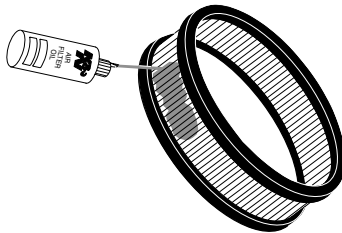

6. INSPECTION

Carefully apply oil on any visible white spots and let sit for 20 minutes. Wipe the gasket or sealing surface with a clean cloth or paper towel to remove excess oil, prior to installation. **DO NOT OVER-OIL AIR FILTER.** Over-oiling may interfere with the proper performance of the engine and/or certain engine components. If you over-oil the filter (e.g., oil is draining or dripping from it, after sitting for 20 minutes), then wash/clean filter and re-oil, per above instructions.

CAUTION

Usage in extreme fine dust conditions may draw the oil from the filter media. Re-oiling of the filter media's clean side might be required, being careful not to over-oil and to allow oil to absorb into filter for 20 minutes before filter reinstallation. Completely service when practicable. For extra protection, use K&N sealing grease on rubber ends of filter. Service only with K&N air filter cleaner and K&N air filter oil.

STOP, DO NOT PROCEED

Let oil wick (absorb) into filter media for 20 minutes before proceeding.

DO NOT DISCARD

Affix the "Do Not Discard" sticker (included with filter) to the air filter housing. Make sure you put the sticker in a highly visible place to alert your mechanic not to discard.

FILTER INSTALLATION

1. Check for gasket deterioration. It may need a replacement.
2. Apply sealing grease when applicable.
3. Seat filter properly into housing.
4. Install cover and tighten nuts, bolts, screws, or clips to factory specifications.

